


EN Installation Manual: www.arctic.ac/fileadmin/alpine11r2/manual_en.pdf
 DE Montageanleitung: www.arctic.ac/fileadmin/alpine11r2/manual_de.pdf
 FR Guide d'installation: www.arctic.ac/fileadmin/alpine11r2/manual_fr.pdf
 ES Manual de instalación: www.arctic.ac/fileadmin/alpine11r2/manual_es.pdf
 PT Manual de Instalação: www.arctic.ac/fileadmin/alpine11r2/manual_pt.pdf
 SE Installationsmanual: www.arctic.ac/fileadmin/alpine11r2/manual_se.pdf

CZ Instalační příručka: www.arctic.ac/fileadmin/alpine11r2/manual_cz.pdf
 HU Telepítési kézikönyv: www.arctic.ac/fileadmin/alpine11r2/manual_hu.pdf
 PL Instrukcja montażu: www.arctic.ac/fileadmin/alpine11r2/manual_pl.pdf
 NL Installatiehandleiding: www.arctic.ac/fileadmin/alpine11r2/manual_nl.pdf
 RU Руководство пользователя: www.arctic.ac/fileadmin/alpine11r2/manual_ru.pdf
 IT Manuale di installazione: www.arctic.ac/fileadmin/alpine11r2/manual_it.pdf


Preparation - Uninstall Intel Stock Cooler

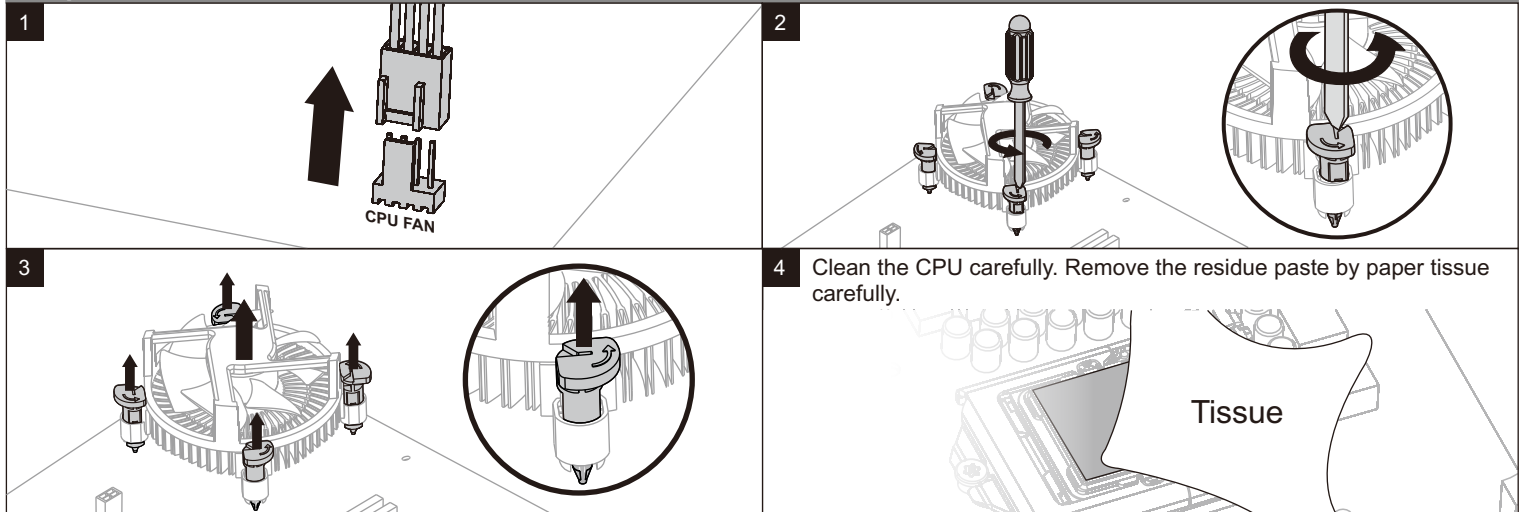

Installation of Alpine 11 Rev.2

The Intel CPU cooler fastening mechanism requires the motherboard to bend. In order to do so, we strongly recommend you to install the motherboard in the PC case first before assembling the Alpine 11 Rev.2.

The heatsink base is asymmetrical. If the cooler contacts with capacitors or other components around the CPU, rotate the cooler 90°. If it still does not fit, turn again. Install the cooler at the position where it does not touch anything.

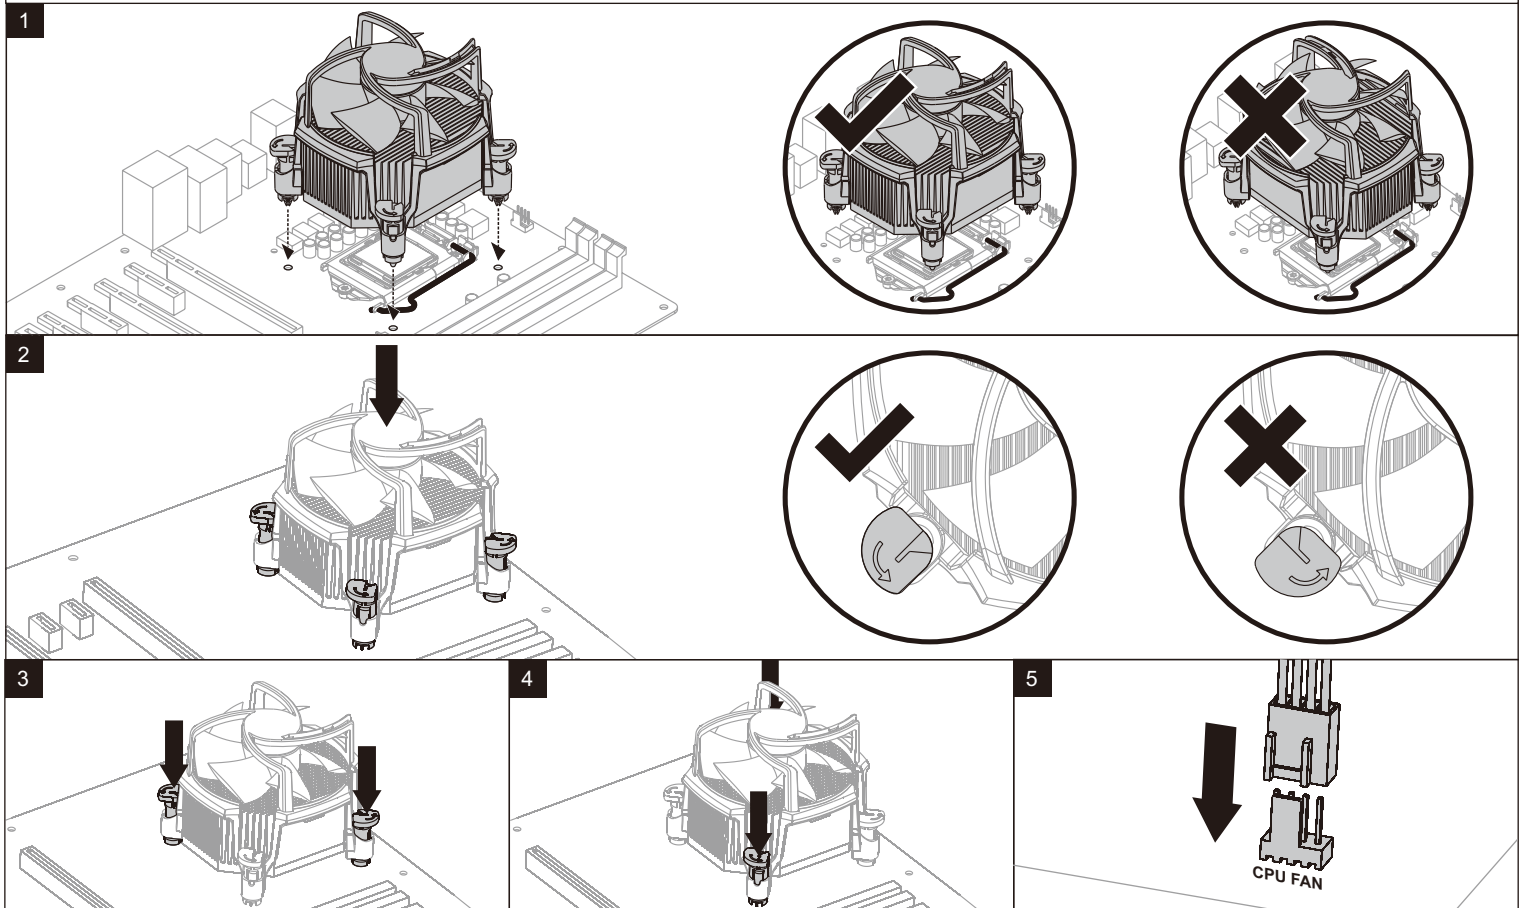

Thermal Compound

The thermal compound is already pre-applied to the heatsink. If the cooler has to be installed a second time, we highly recommend using the MX-4 from ARCTIC. Only this compound guarantees optimal performance in combination with the surface of our heatsinks.

Warranty

This ARCTIC product includes a six-year limited warranty. Please visit warranty.arctic.ac for further details.

© 2012 ARCTIC (HK) Ltd. All Rights Reserved.

ARCTIC Switzerland AG

www.arctic.ac

No part of this manual including the products described in it, may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purpose, without the express written permission of ARCTIC (HK) Ltd. In no event shall ARCTIC (HK) Ltd. and its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.